



Rechargeable Pet Trimmer

MC-680

PROFESSIONAL CLIPPER

To ensure you achieve the best possible use of your clipper please read the following instructions.

Specifications


Charging time: about 3 hours

Operation time: about 4 hours

Blade width: 45 mm

Dimensions: 185(H)×45(W)×40(D)mm

Component Name

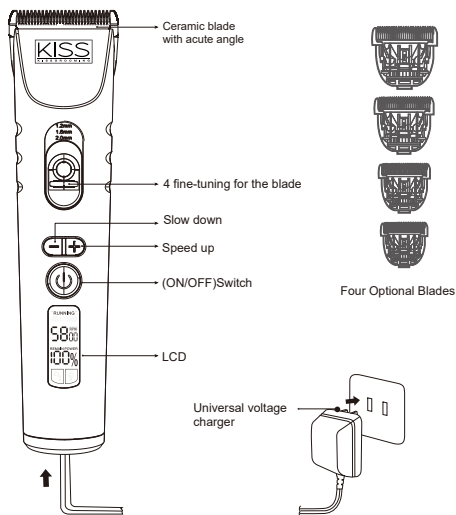

Accessories



Owner's Guide

LCD



Motor speed display
3 level (5000RPM/5800RPM/6500RPM)



Battery percentage display
(1%-100%)



After approximately 2hrs of constant use, the oil indicator on the left side will light up and the alarm will sound. On the right side the charging light will flash when battery power is less than 10%.

Left Right

※ Work while charging is available (Please turn off the machine before charging)

SPECIFICATIONS

Hair Clipper	Motor	Operating voltage: 3.7V
		Centering material: anti-wear brass
	Battery	2000mA high-performance environment-friendly battery
		Charging time: about 3 hours
Adapter	Operating time with full charge: about 4 hours	
	Input: AC 100V ~ 240V 50/60Hz	Output: DC 5V---1000mA

SAFETY CAUTION

Keep the clipper away from moisture; do not submerge in water or liquid.

1. Use this appliance for its intended purpose. Use only on clean, dry hair.
2. Close supervision is necessary when this appliance is by or near children.
3. Use only with accessories included in the package, or those recommended by the manufacturer.
4. Avoid contact with the eye area. Avoid use near or on open wounds, damaged or sensitive skin.
5. Except when charging, always unplug from the electrical socket after use.
6. Keep away from water and all liquids and any detergent agents.
7. Do not pull, twist or wrap the cord tightly. Pull on the plug (not the cord) to remove from power receptacle.
8. Charging should be done in a safe environment (between 0 and 40°C); indoors in a dry place.
9. The charger adaptor must be kept dry at all times.

10. Do not disassemble the product.
11. The product can only be cleaned by cloth with little water or mild soap solution.
12. It's normal for the product to produce little heat during using or charging.
13. Use or store the trimmer only at room temperature (between 0 and 40°C). Avoid direct sunlight, moisture or heated surfaces and environments.
14. Except for the purpose of charging, always switch off and unplug the adapter from the wall socket after use.
15. Do not frequently use the clipper plugged without having recharged the battery, as this may reduce the life of the battery.

Should the following situations occur, unplug and switch off immediately, and send for examination or repair.

1. The blade, main unit, power cord or attachment comb is damaged.
2. The clipper or the adapter is dropped into water.
3. The clipper is switched off, but the charging indicator does not light up when plugged into the power source.

The clipper and accessories must be checked regularly to prevent damage and ensure good performance.

If damage is detected, do not put the device into operation.

Blade

1. The blade must be lubricated before and after each use. This will maintain good condition and will extend its service life.
2. Nonstop usage for hours may cause overheating of blades, reducing the cutting performance and shortening their life. Should the blades overheat, switch the unit off for a few minutes to let it cool down; then lubricate the blades.
3. Hair must be clean and dry before cutting. Foreign matter hidden in the hair may damage the blade edge.
4. Hair may gather inside the blade housing during use. Too much stored hair will reduce the oscillating ability of the blades and cause malfunctioning. Always clean away hair in the blade housing before and after each use.
5. Avoid impact of the blade with hard objects as this may cause damage to the blade teeth.

Battery

1. Do not overcharge. It takes 3 hours to charge your trimmer. Charging over 36 hours may shorten the life of the battery.
2. The life of the battery will be shortened if the trimmer remains at less than full charge for long periods. Charge unused clippers every 3 months to activate the battery.
3. It is normal for the adapter and the internal parts to become warm when charging.
4. Please remove the battery safely and return it to the specified places when the battery runs out. Never discard it casually.



Ceramic Blade with Acute Angle



4-length Adjustable Blade



2000mA High-performance Battery


OPERATING INSTRUCTIONS

Charging

1. When the power percentage is less than 5%, switch off the clipper to charge.
 2. Connect the charging cord to the charging slot at one end of clipper.
 3. Confirm that the switch is off and insert the plug.
 5. It will automatically stop after a full charge.
 6. A full charging takes an estimated 3 hours. The battery function will be at full capacity after three charges.
- Recharging time: 3 hours


Install the Blade

Select a blade with a suitable size before operation.

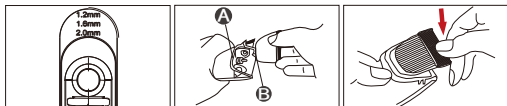

1. Push up blade length adjuster until 2.0mm before installing the blade.
2. Align the blade (B) with the hair clipper's slot (A).
3. Push the blade into the slot until it snaps in position.

Blade Adjustment

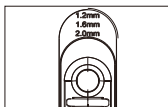

1. The blade length adjuster is on the clipper.
2. Select the desired length of the blade by moving the adjustment slide.

Comb Attachments

You may adjust the cutting length from 3 - 12mm by attaching the comb attachment.



1. The cutting length is marked on the comb attachments.
2. Select a suitable size and slide the blade into the comb attachment. Hold both sides of the comb and push until the comb is in position. (Notes: The comb should not be loose or easy to fall off after installation.)

Cord Operation

This trimmer can be operated by plugging it into the power source when the battery is not fully charged.


1. Switch off.
2. Connect the adapter to the wall socket.
3. Connect the DC plug to the clipper.
4. Check if the charging indicator is lit.
5. Switch "On" to operate.

MAINTENANCE


Always switch off before removing, replacing and cleaning the blade. Set blade adjuster to 2.0mm to reassemble blade; otherwise the adjuster does not work.

Removing and Cleaning the Blade

1. Remove the blade set from the blade housing by pressing the top cutting head with your thumb.

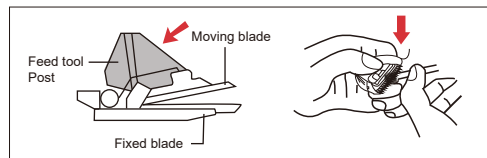


2. Brush off the collected residual hair from between the teeth and the blade housing.

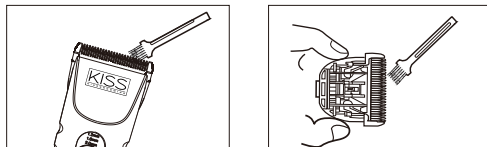

3. Move the oscillating bracket with your thumb to separate stored hair from the blades. Brush off the hair between the blades. Make sure that hair is not trapped between the blades.

Lubricating the Blade

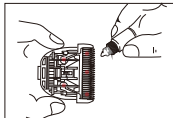

1. Before or after use, drop a small amount of oil on the red-point places shown in the left picture.
2. Drop oil and spread evenly. Slightly move the oscillating part to spread the oil between the blades.

Remove the Blade



Press the moving part of the blade with the thumb and then remove the blade.

Please hold with the other hand to avoid the blade falling off.

Cleaning the Main Body and Accessories

1. Switch off and unplug the trimmer before cleaning.
2. Wipe with a soft damp cloth.
3. Allow it to completely air dry before use.

BLADE LIFE

*The service life of the blade may be shortened in the following situations:

1. The blade has not been lubricated properly on a regular basis.
2. The blade cuts unclean hair or objects other than hair.
3. A foreign object damages the blade edge.
4. The blade is subjected to an impact.

If the cutting efficiency is reduced substantially despite proper maintenance, the blade has exceeded its service life and should be sharpened or replaced.

MOTOR LIFE

*No maintenance is required for the motor.

*Professional DC motor.

*The service life of the motor may be shortened in the following situations:

1. The clipper is stored in humid surroundings for long periods.
2. The blade has not been lubricated properly.
3. Stored hair in the blade housing has not been cleaned properly.
4. An incorrect power source is used.

BATTERY LIFE

*The service life expectancy of the battery is approximately 3000 recharging cycles.

After that the charge will gradually drain and the power will be reduced.

*The service life of the battery may be shortened in the following situations:

1. The battery is stored in humid surroundings for long periods.
2. The battery is overcharged.
3. The battery is over depleted (when the battery is out of power, the clipper is kept in the switched - on position for long periods).
4. The trimmer is always used plugged in.
5. The trimmer has not been charged for more than 3 months.

*When not in regular use, it is recommended to recharge the battery at least every 3 months.

*If cordless operation lasts for less than 10 minutes, despite proper charging, the battery has exceeded its service life and should be replaced.

ENVIRONMENTAL DISPOSAL

It is the owner's responsibility to dispose of the clippers in a reasonable manner after their useful life. Do not dispose of in household waste.

The clipper can be returned to the place of purchase for recycling, or taken to your local authority waste disposal site.



Producer : Shanghai TOEX International Trading Co., Ltd.

Address : Floor 5, Building 6, No.675 Zhujin Road, Songjiang District, Shanghai, 201615, China